




Original

Operating and maintenance manual

High tip bucket

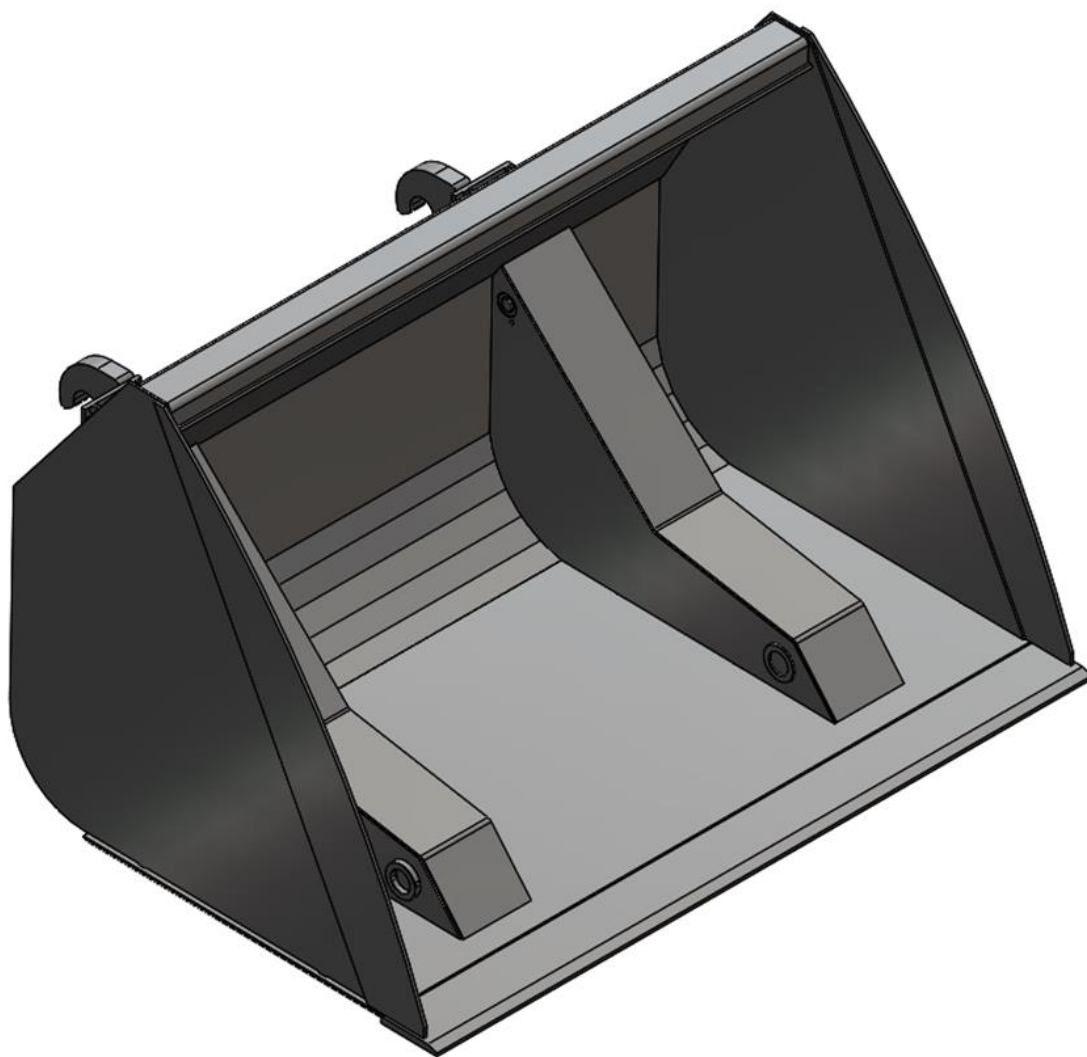

Lametal Oy • Kaskenviertäjantie 2, 73100 LAPINLAHTI, FINLAND

• info@stark.fi • parts@stark.fi • www.stark.fi

General

Congratulations on the purchase of your STARK High tip bucket!

For us, the long lifecycle and efficiency of your new equipment is a priority. To keep the bucket in top working condition, read this manual carefully before using the equipment.

STARK products are engineered and manufactured in Finland, and each of them is equipped according to the needs of the customer.

Never let anyone operate or maintain the device without reading this manual carefully! Always make sure that safety precautions are observed in use and maintenance. Keep this manual for future reference and make sure to hand it over to a new owner.

The cornerstones of the product development of STARK attachments are quality, durability and economy. The products are engineered to be high-performing, safe and durable in professional use. Any feedback on our products is welcome and contributes to the further development of our products. If you have any questions about the use or maintenance of the high tip bucket, please contact us by e-mail: info@stark.fi

Visit our webpage www.stark.fi for the complete product range, including new products.

The manufacturer reserves the right for structural and technical changes without prior notice. Therefore, some pieces of information given in the manual may have changed after printing this manual.

Read before use

Make sure you know your equipment before you start using it.

Equipment may be operated only by an individual who is thoroughly familiar with its use.

All operators must be properly instructed before use and maintenance of the equipment. Use by individuals with insufficient instructions may pose serious risks to the operators themselves, to the environment and the equipment.

When coupling the attachment to the base machine, make sure:

- that all locking cotters are intact and in order
- there is no pressure in the hydraulic system
- that hydraulic hoses are intact
- there is no skin contact to hydraulic oil when connecting hydraulic hoses
- not to pull by the hydraulic hoses, but only by the hydraulic fitting

During operation, pay attention to:

- safe, appropriate travel speed
- other traffic, people and animals
- danger zones and objects that block your view
- children

NEVER use the machine, if there is someone in the danger zone.

NEVER go under the attachment.



Table of contents

General.....	2
Read before use	2
1. DECLARATION OF CONFORMITY	4
2. PURPOSE OF USE.....	5
3. SAFETY PRECAUTIONS.....	5
4. IDENTIFICATION INFORMATION AND SPAREPARTS	6
4.1. Identification plate	6
4.2. Maintenance services.....	6
5. MAIN PARTS OF THE HIGH TIP BUCKET	7
6. USING THE HIGH TIP BUCKET.....	8
6.1. Attaching the high tip bucket to the base machine	8
7. OPERATING THE HIGH TIP BUCKET	9
7.1. Operating instructions.....	9
6.2. Detaching the high tip bucket	10
6.3. Accessories	10
8. MAINTENANCE OF THE HIGH TIP BUCKET	11
8.1. General safety precautions for the use and maintenance	11
8.2. Tightening torque	11
8.3. Daily maintenance	11
8.4. Maintenance after first 10 hours of operation	11
8.5. Maintenance at 50-working hour intervals or on a weekly basis	12
8.6. Lubrication points.....	12
9. HYDRAULICS	13
10. WARRANTY POLICY	14

1. DECLARATION OF CONFORMITY

The original manufacturer's EC declaration of conformity:

Generic product name: High tip bucket

Models: KKK 1300, KKK 2000, KKK 3000, KKK 4000, KKK 5000, KKK 6000

Manufacturer:

Lametal Ltd

Kaskenviertäjäsentie 2 73100 LAPINLAHTI, Finland

tel. +358 17 731 565

Declares that the above-mentioned equipment meets the provisions of Directive 2006/42/EC on machinery and, where applicable, comply with the standards

- SFS-EN ISO 12100-1,
- SFS-EN ISO 12100-2
- SFS-EN 1050

The person authorized to compile technical documentation:



Lassi Mehtonen

Managing director

Kaskenviertäjäsentie 2

73100 Lapinlahti, FINLAND

2. PURPOSE OF USE

High tip buckets are used for collection of snow and other light materials (max. density 1000kg/m³). Moving heavier material is prohibited and will terminate warranty.

3. SAFETY PRECAUTIONS

Make sure you know your equipment before you start using it. Equipment may be operated only by an individual who is thoroughly familiar with its use.

Before connecting hydraulics to the base machine, make sure that:

- there is no-one between the attachment and the base machine
- the base machine is turned off and the parking brake is on.

When coupling the attachment to the base machine, make sure that:

- all locking cotters are intact and in order
- hydraulic hoses are intact
- there is no skin contact to hydraulic oil when connecting hydraulic hoses
- you do not to pull by the hydraulic hoses, but only by the hydraulic fitting.

During operation, pay attention to:

- safe, appropriate travel speed
- other traffic, people and animals
- danger zones and objects that block your view
- children
- use of turn signal when driving

NEVER use the machine, if there is someone in the danger zone

NEVER go under the attachment



WARNING! Pressurized hydraulic hoses and components!

During maintenance, the hydraulics of the base machine **MUST** be turned off. The base machine **MUST** also be turned off and the parking brake **MUST** be applied. The equipment must be properly supported, if maintenance can only be performed by going under the equipment. Never go under the equipment if it is not properly supported.

Daily maintenance:

- check general condition of structures, make repairs if needed
- check the hydraulic hoses and fittings, and replace damaged parts

After every 50 hours of operation:

- lubricate points specified in later section of this manual
- check all bolts and nuts for tightness

Check all bolts, nuts and hydraulic fittings for tightness after the **first day** of operation!

If the equipment is not likely to be used for a longer period of time, clean it thoroughly after use and lubricate as instructed.

4. IDENTIFICATION INFORMATION AND SPAREPARTS

4.1. Identification plate

Identification plate is placed on the side of the equipment. The plate includes contact information, machine type, year of manufacture, serial number and weight. (See an example of an identification plate in picture 1 below).

The first four numbers in the serial number indicate the month and year of manufacture (month first). The remaining five numbers constitute the machine tracking number, which is stored in the manufacturer's database (13971 in the example below).



Picture 1. Identification plate

Take down the machine type and the serial number of your bucket sweeper:

Product and model _____ Serial number _____

4.2. Maintenance services

When replacing parts, use original, manufacturer spare parts only. By using original spare parts you ensure dependable operation of the high tip bucket and comply with the warranty policy. To facilitate the supply of spare parts, always inform the manufacturer/retailer of the model and serial number of the high tip bucket (marked in the identification plate) when you order spare parts.


For more information on maintenance and spare parts, please contact the STARK maintenance and spare part services or your retailer.

Contact information for STARK maintenance services:

tel. +358 (0)17 731 565, e-mail info@stark.fi

tel. +358 (0)44 758 6221, e-mail parts@stark.fi

5. MAIN PARTS OF THE HIGH TIP BUCKET

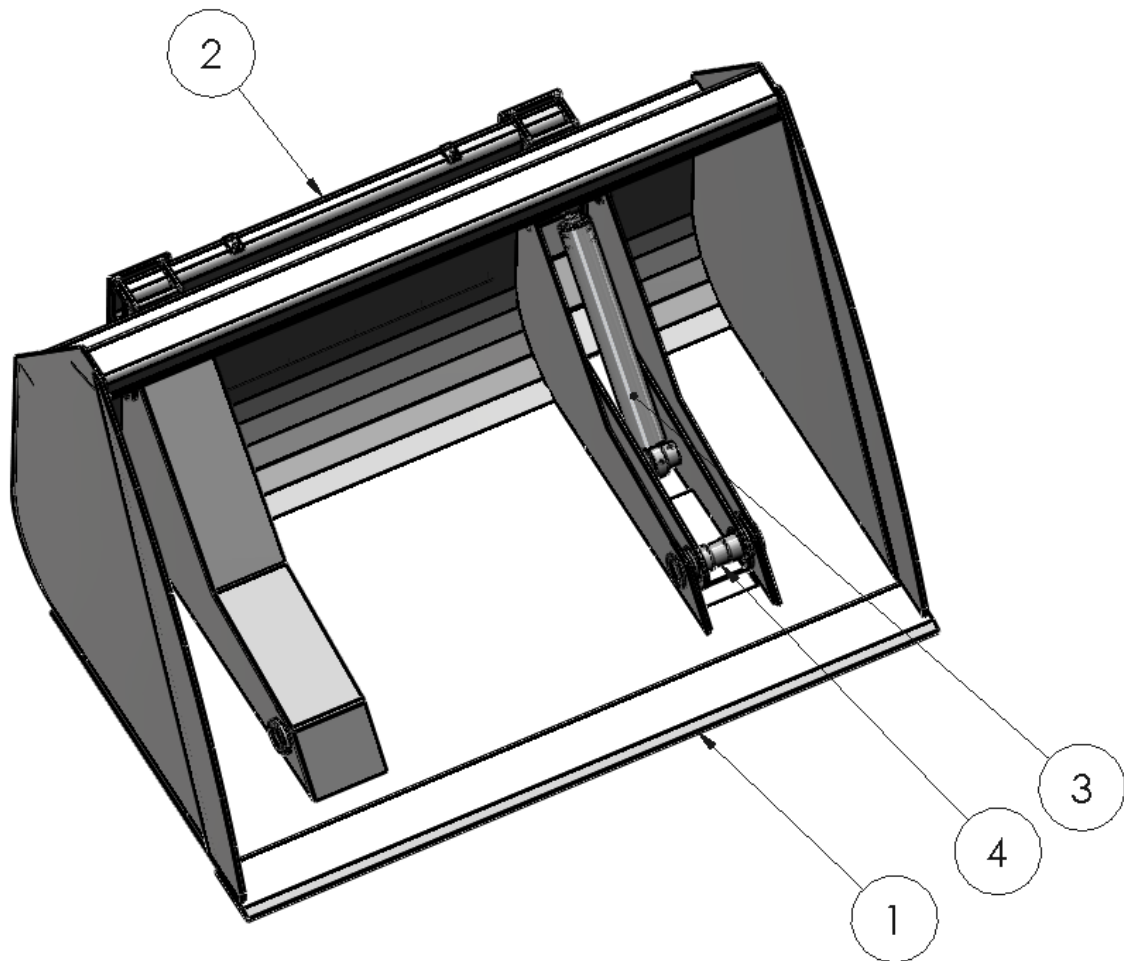

Picture 1. Main parts of the device

- 1) Bucket frame
- 2) Tipping frame
- 3) Hydraulic cylinder
- 4) Peg

6. USING THE HIGH TIP BUCKET

When attaching the high tip bucket for the first time, make sure it is compatible with the base machine by following the instructions below. Always check the compatibility when attaching the bucket spreader to a new base machine.

6.1. Attaching the high tip bucket to the base machine

The high tip bucket is attached to the base machine by bolt-on fitting. The machine is connected to a hydraulic system. Hydraulic circuit diagrams can be found in a later section in this manual. Ask your retailer for available STARK FIT quick hitches.

Before using the high tip bucket, MAKE SURE all locking cotters are secured and intact.

When coupling the high tip bucket to the base machine, please pay attention to the instructions on the use of the base machine.

1. Make sure that the attachment and the base machine are compatible in terms of mechanical solutions, hydraulics and electricity.
2. The high tip bucket is attached to the coupler on the base machine (e.g. a loader). Attach the high tip bucket to the base machine, and make sure the locking cotters are secured. Apply parking brake.
3. Turn off the base machine and make sure the parking brake is applied.
4. Make sure there is no pressure in the base machine hydraulic system. When connecting, always make sure the hydraulic connectors are clean and the hoses are intact.
5. Check carefully the attachment's, the base machine's and the fitting's trajectory for collision. Make sure that the needed space for hydraulic hoses and -attachments is adequate.
6. During first hours of operating the attachment, bolts, nuts and connectors might loosen up. **Retighten them** after the first day of operating the attachment.


7. OPERATING THE HIGH TIP BUCKET

Check following before using the high tip bucket:

- Bucket is installed properly to the base machine
- All locking cotters are in place
- Hydraulic hoses are attached properly
- Hoses are intact
- There are no oil leaks in attachment
- All functions are in order

7.1. Operating instructions

1. Make sure that the attachment and the base machine are compatible in terms of mechanical solutions, hydraulics and electricity.
2. The high tip bucket is attached to the coupler on the base machine (e.g. a loader). Attach the high tip bucket to the base machine, and make sure the locking cotters are secured. Apply parking brake.
3. Turn off the base machine and make sure the parking brake is applied.
4. Make sure there is no pressure in the base machine hydraulic system. When connecting, always make sure the hydraulic connectors are clean and the hoses are intact.
5. Check carefully the attachment's, the base machine's and the fitting's trajectory for collision. Make sure that the needed space for hydraulic hoses and -attachments is adequate.
6. When loading the bucket, do not press it against ground. Tipping mechanism can be damaged.
7. When loading from high, balance of the base machine changes and operating can be unbalanced.
8. Slow down the hydraulic cylinders when reaching the extreme position. Otherwise the bucket's joints will be damaged, which shortens the lifespan of the bucket (picture 3).
9. Observe all the unusual activity and oil leaks when operating the high tip bucket

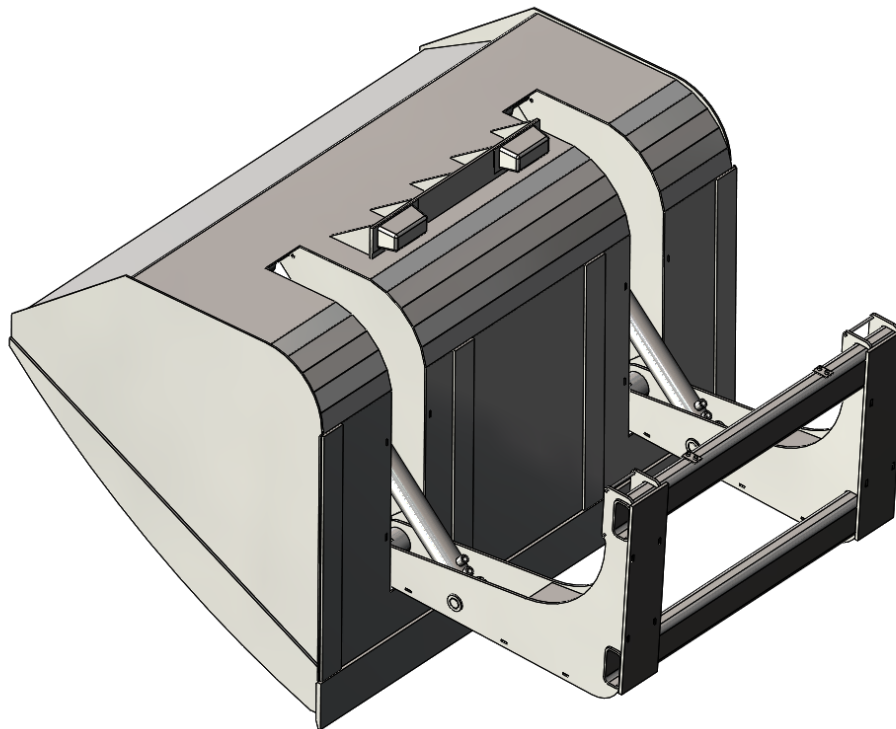

Picture 3. Extreme point of the bucket

7.2. Detaching the high tip bucket

1. Lower the high tip bucket down on an even surface.
2. Turn off the base machine, apply the parking brake and depressurize the system.
3. Detach the hydraulic hoses and protect hose ends with plugs.
4. Unlock the coupling mechanism and detach the device.
5. If the equipment is not likely to be used for a longer period of time, clean it thoroughly after operating and lubricate as instructed.

7.3. Accessories

The following accessories are available for the high tip bucket:

- Flat- and perforated blade sets

8. MAINTENANCE OF THE HIGH TIP BUCKET

8.1. General safety precautions for the use and maintenance

- Comply with existing laws and regulations and the instructions given in this manual.
- Never go under an unsecured device.
- Always apply the parking brake of the base machine before performing any actions on the device.
- Only use tools that are in proper working order.
- Be careful with the pressurized hydraulic hoses and components.
- Make sure there is no pressure in the hydraulic system. Take into account the pressure accumulator.
- Make sure hydraulic fluids or greases do not leak to the ground.
- Use all necessary personal protectors.

8.2. Tightening torque

	Nm (strength 8.8)
M4	3,3
M5	6,5
M6	11,3
M8	27,3
M10	54
M12	93
M14	148
M16	230
M18	329
M20	464
M22	634
M24	798
M27	1176
M30	1597
M33	2161
M36	2778
M39	3597

Table 1. Tightening torque

8.3. Daily maintenance

In order to prevent further damages, it is important to inspect the device visually for possible defects. Inspect at least the following daily:

- Possible leaks of the hydraulic hoses and components
- General mechanical condition


8.4. Maintenance after first 10 hours of operation

- Lubrication, recommended quality NLGI-2 grade grease or equivalent, shown in the later section
- Check the bolts for the tightness (table 1)

8.5. Maintenance at 50-working hour intervals or on a weekly basis

- Lubricate, preferably with a NLGI-2 grease or equivalent, shown in the later section
- Check the mechanical condition of the device for bends, distortions or breaches
- Check fastening bolts for tightness

8.6. Lubrication points

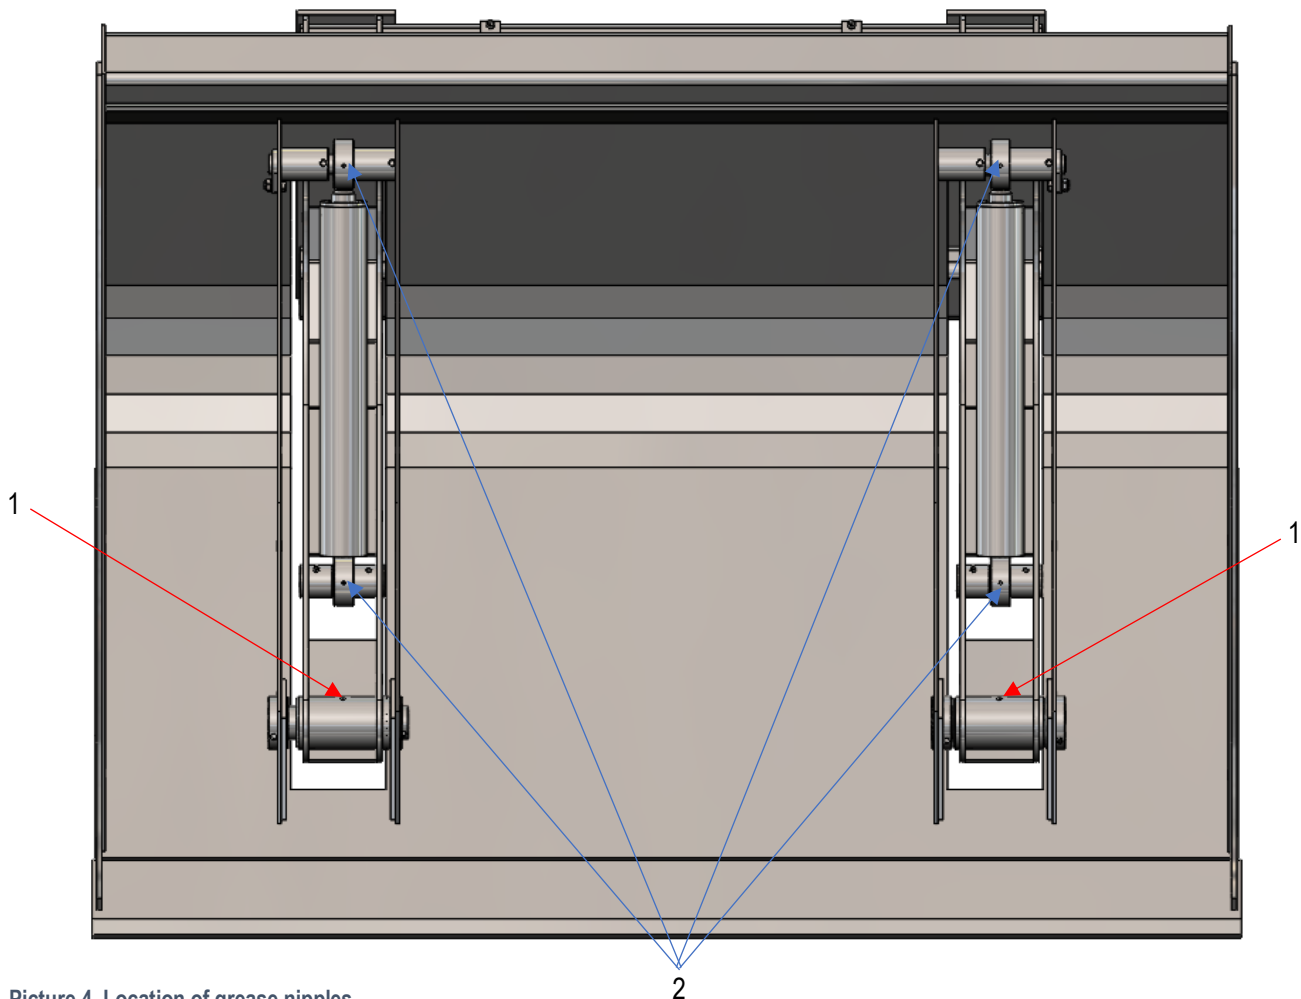

Picture 4. Location of grease nipples

- 1) Grease nipples for the joints of the bucket
- 2) Grease nipples for the hydraulic cylinders

9. HYDRAULICS

The High tip bucket requires 2-action hydraulic section. The hydraulic chart of 2-hose system is in a figure 1.

A - Base machine control block
B - Bucket tilting cylinders

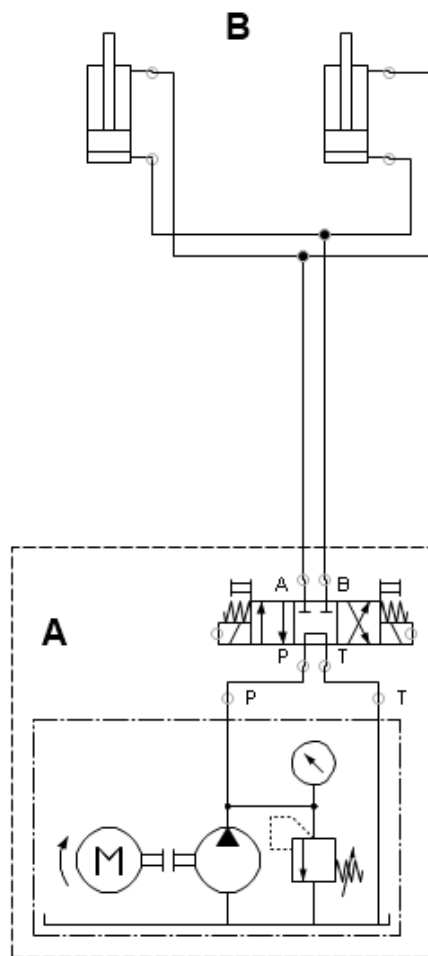


Figure 1. Hydraulic chart for high tip bucket

10. WARRANTY POLICY

1. Warranty coverage

Lametal Oy, the manufacturer of STARK attachments, offers new devices a guarantee which covers material and manufacturing defects in accordance with the terms in this warranty policy. Limitations to the warranty are specified in point 7.

2. Warranty starting date

The warranty starts on the agreed date of product delivery to the client, or on the date of approved instalment or on the date the equipment has been taken into operation. The equipment is taken into operation when it has been delivered to the client in accordance with the agreement and the client has acknowledged receipt of the equipment. The client is to check the equipment before use as instructed in this manual and to notify the manufacturer or the reseller of the equipment of any defects or flaws that are noticed during initial inspection. This notification is to be done in writing within eight (8) days after delivery. Hidden defects and defects that are otherwise difficult to detect must be reported immediately after detecting them, within one (1) year after receipt of the equipment at the latest.

3. Warranty period

STARK warranty covers a period of one (1) year. If need be, the client and the manufacturer make separate agreements on warranty concerning repairs and spare parts used in repairs.

4. Repairs during the warranty period

Repairs during the warranty period are carried out free of charge within the normal working hours by the manufacturer repair and maintenance services or by a repair service provider accredited by the manufacturer. If repairs are carried out by a repair service provider which has not been accredited by the manufacturer, the manufacturer does not compensate for costs that are not covered by the warranty, such as travel and waiting hours, daily allowances, travel expenses or costs arising from detaching and reinstalling the equipment. The manufacturer does not compensate for indirect costs caused by repairs during the warranty period, such as lost working hours. Original parts replaced during the warranty period shall remain with the manufacturer. The client must keep the damaged parts for six (6) months unless otherwise agreed, and have them delivered to the manufacturer without delay upon request.

5. Conditions for repair under warranty

Manufacturer's instructions for operation, instalment and maintenance have been followed.

The equipment was damaged when operated in conditions for which it has been engineered.

In maintenance and repairs, only original, manufacturer parts have been used.

The form for the notification of defects provided by the manufacturer or the retailer has been filled in according to the instructions and submitted for processing.

6. Warranty after repair

Warranty holds until the end of the original warranty period. Repair under warranty does not prolong the warranty period.

7. Limitation to the warranty

The warranty does not cover:

- consequential expenses resulting from the damaged equipment
- indirect costs, such as loss of working hours
- damages caused to a third party
- equipment or components that have been modified or repaired by the client themselves
- damages caused by normal wear and tear, inappropriate maintenance operations, neglect, accident, connecting error, equipment overloading, user's inexperience or use of other than original parts

The warranty offered by the manufacturer does not exceed the purchase price of the equipment.

8. Warranty claim procedure

For a warranty claim to be processed, the form for the notification of defects provided by the manufacturer or the retailer must be filled in according to the instructions and submitted for processor. The warranty claim procedure is carried out either in Finnish or English.